

## QuikTune® 800 Installation Instructions

**CAUTION: DO NOT OVERTIGHTEN SCREWS.**

1. Mounting - Attach the arrowrest to the riser using the enclosed 5/16-24 mounting bolt and washer.
2. Support Arm Adjustments - The gap between the support arms can be changed to accommodate the largest aluminum and smallest carbon arrows. Loosen lock screws (A). Turn each support arm until desired gap is achieved. Re-tighten both lock screws .  
**DO NOT OVERTIGHTEN!**
3. Adjusting Centershot & Vertical Positions - Loosen lock screw (B) and adjust arrowrest body left or right as needed. Snug lock screw until rest cannot be easily moved left or right but can be rotated up or down. Holding the unlocked tension cap rotate the pivot shaft (C) up or down until desired height is reached and tighten lock screw (B) (We suggest that the arrow sit square to 3/8" above square).  
**DO NOT OVERTIGHTEN! Overtightening may prevent the launcher arms from moving freely.**
4. Spring Tension Adjustments - Tension is adjusted by moving the 6-32 cap screw on the side of the bracket (D) to one of three positions: Low = lightweight arrows; Medium = medium weight arrows; High = heavyweight arrows. Choose the setting that works best for your setup.
5. Lubrication - This arrowrest should not normally require additional lubrication during its normal service life. Should additional lubrication be needed, use a lightweight bow oil.
6. Position silencers over the support arms. Use a hair dryer, heat gun or other controlled heat source to shrink silencers.

